

MULTI-RAKE BAR SCREEN



The Kusters Water ProTechtor® Multi-Rake Bar Screen combines fine or coarse screening with high solids capture rates. Its robust construction and overload feature ensure reliable operation.




PRINCIPLE OF OPERATION

Wastewater flows through the stainless steel bars while the non-biological solids, such as paper and plastics, are trapped on the screen face. The screenings are removed from the bars by rakes fixed between two heavy duty roller chains. These rakes utilize laser cut teeth that precisely engage and clean the bars to a depth of 12 mm. In the event an object becomes lodged in the bars, the overload feature enables the rakes to reverse and remove the obstruction then continue cleaning the bar rack.

The screenings are conveyed from the bars over a dead plate, where they have sufficient time to drain, and are discharged at the top of the screen into a dumpster, conveyor or compactor. The Multi-Rake Bar Screen is designed to tightly seal to the walls of the channel to prevent any bypass from occurring and, due to the design of the lower frame, a recess in the floor of the channel is not required.

MULTI-RAKE BAR SCREEN

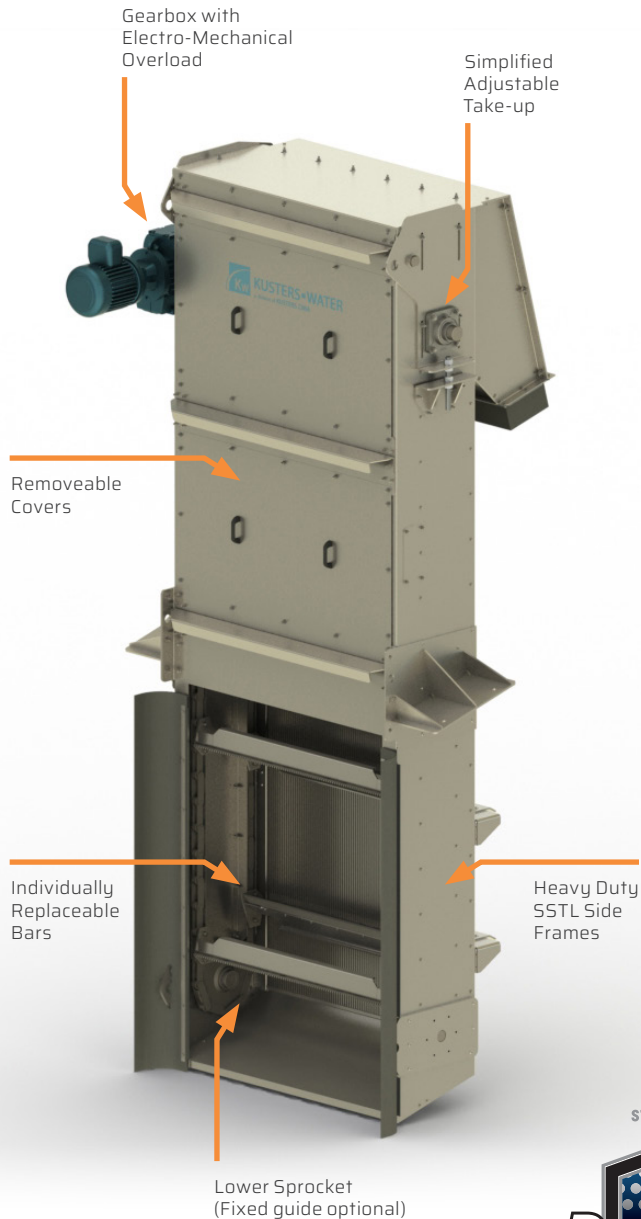

Features

- Rugged stainless steel construction
- Automatic “jam” reversing
- High hydraulic capacity, low headloss
- Insensitive to grit and stones
- “Maintenance free” bottom bearing, or fixed guide
- Dual speed operation
- Trapezoidal Bar Design
- Replaceable bolt-in bars
- US Manufactured (ISO 9001:2015)
- 3-Year Factory Warranty

Applications

- Municipal sewage treatment plants
- Industrial wastewater treatment
- CSO screening applications
- Wastewater pump stations
- Sludge Screening

Dimensions

- Channel widths from 1 to 12’
- Standard channel depths to 40’
- Custom channel depths available greater than 40’
- Bar spacing from 4 to 100 mm
- Standard angles of inclination: 50°, 75°, 80°, 85°, 90° from horizontal

For more information:

 864.576.0660

 info@kusterswater.com

 KustersWater.com

KUSTERS WATER DIVISION


Jagenberg Group